

STEERING ASSEMBLY

Steering wheel: Removal - Refitting

36A

Tightening torques

new steering wheel bolt	44 N.m
-------------------------	--------

IMPORTANT

Consult the safety and cleanliness advice and operation recommendations before carrying out any repair (see **Steering: Precautions for the repair**) .

REMOVAL

I - REMOVAL PREPARATION OPERATION

- ☐ Apply the procedure for deactivating the safety systems. (see **Airbag and pretensioners: Precautions for the repair**)


- ☐

WARNING

Incorrect wheel alignment may damage the rotary switch.

- ☐ Remove the driver's front airbag (see **Driver's frontal airbag: Removal - Refitting**) .
- ☐ Set the wheels straight ahead.
- ☐ Disconnect the connectors.

II - OPERATION FOR REMOVAL OF PART CONCERNED

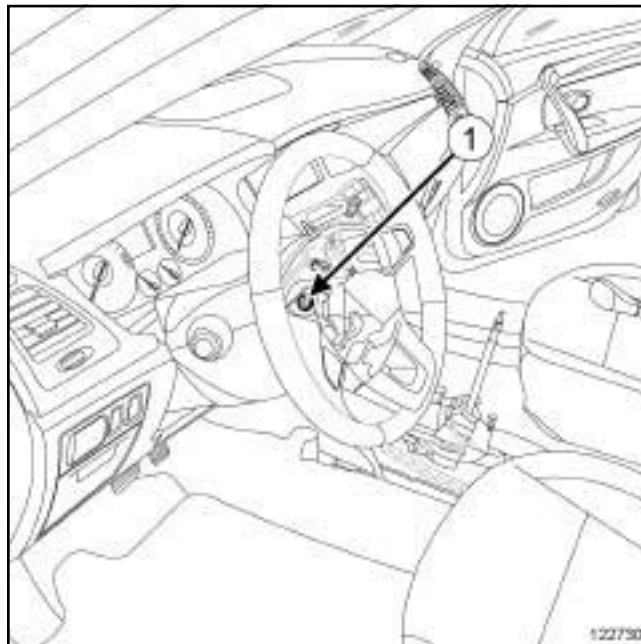

122730

- ☐ Remove the steering wheel bolt (1) .

WARNING

To ensure that the electronic systems operate correctly, do not damage the locking systems of the connectors.

- ☐ Remove the steering wheel.

- ☐

WARNING

To prevent damaging the rotary switch, do not turn the mobile section of the rotary switch.

REFITTING

I - REFITTING PREPARATION OPERATION

- ☐ parts always to be replaced: Steering wheel bolt (13,04,01,09).